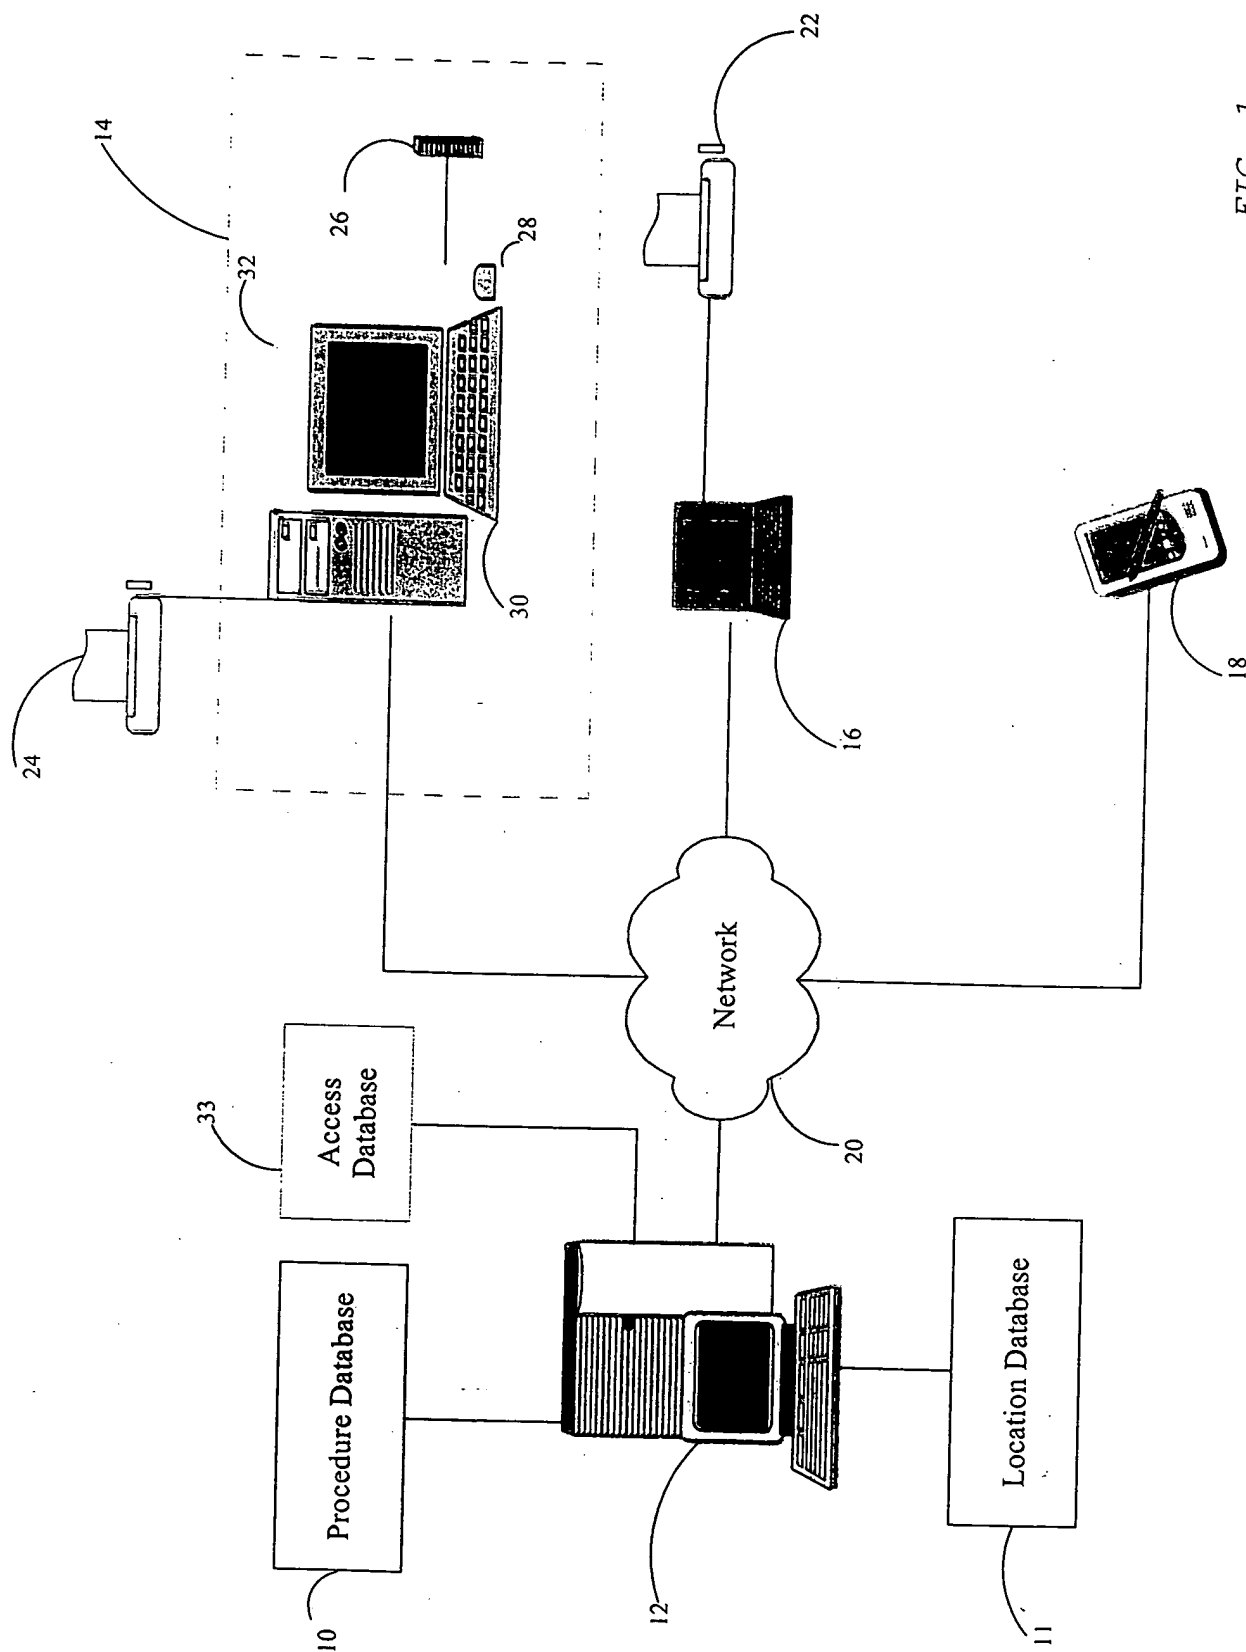


BEST AVAILABLE COPY

Express Mail  
EV 337812116 US

FIG. 1



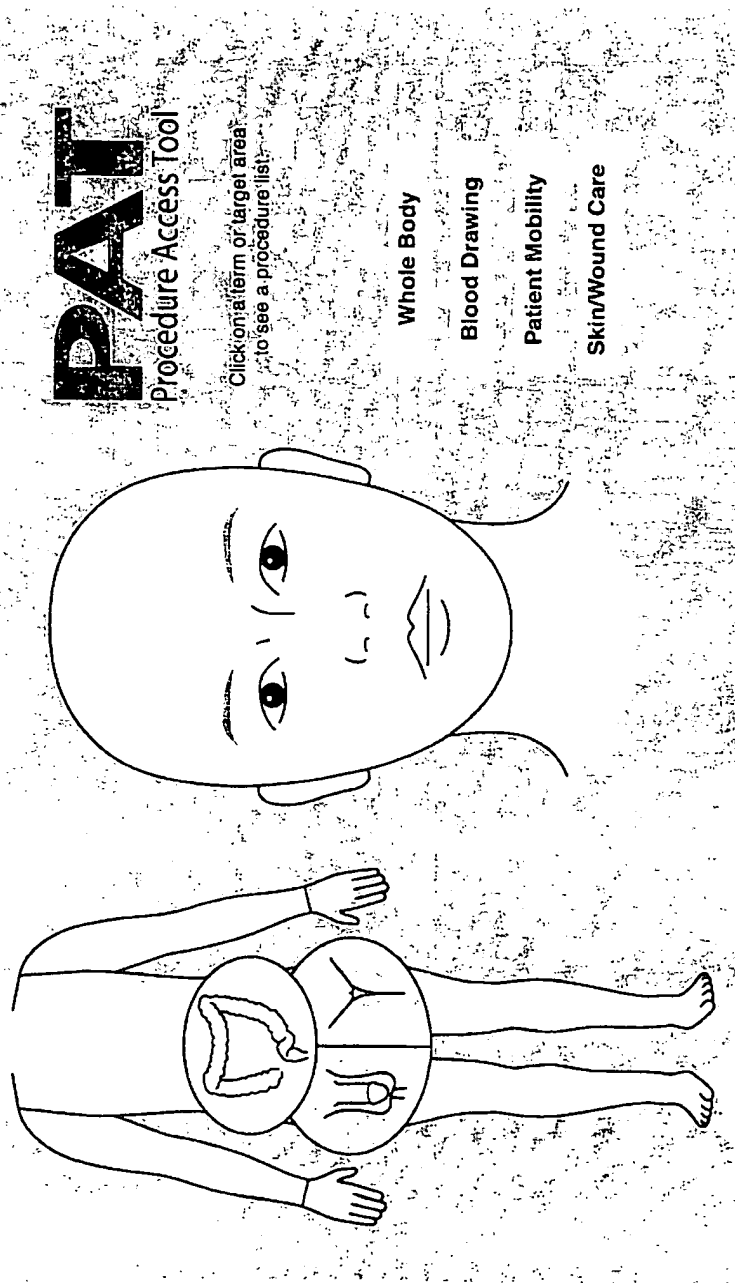


FIG. 2

## Changing Central Line Dressing

### Remove Old Dressing

- 1 Prepare:
  - Check iodine allergies
  - Wash hands
  - Put on mask from kit
  - Put on clean gloves
  - Lay patient as flat as tolerated

- 2 Carefully lift dressing from edges toward center




- 3 Inspect:
  - Catheter - No kinks or leaks
  - Site - No erythema, edema, drainage, or skin reactions


**IMPORTANT:** Notify physician of any complications after dressing change

### Clean Site

- 1 Put on sterile gloves from kit

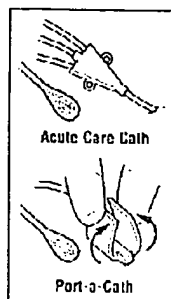

- 2 Use drape to lift catheter

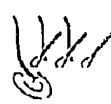

Alcohol x 3

- 3 Clean site with all three alcohol swabs:
  - Start at insertion point and work outward, cleaning catheter as you go
  - Air dry



Iodine x 3


- 4 Scrub site with all three povidone-iodine swabs:
  - Scrub at insertion point 30 seconds
  - Work outward in a circular motion 30 seconds, scrubbing catheter as you go
  - Air dry 1-2 minutes or longer

### Apply New Dressing

- 2 Cover site and catheter hub with two gauze pads

**OPTIONAL:** Paint area around gauze pads with tincture of benzoin swab

- 1 Apply povidone-iodine ointment to insertion site

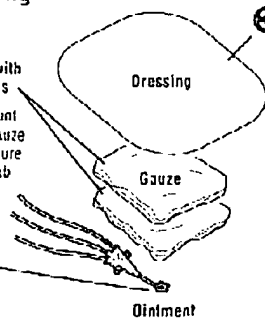

- 3 Trim hypafix dressing 1" larger than gauze. Apply dressing.

- 4 Anchor catheter securely with tape. Label with date, time and initials

**IMPORTANT:** Notify physician of any complications after dressing change

FIG. 3

FIG. 4

